



MINI VAULT
DIGITAL LOCK
FIRE PROOF
SAFE

MANUAL AND
SAFETY GUIDE

THANK YOU FOR PURCHASING A
SAFE FROM COPPERHEAD
ARMOURY.



The information provided in this manual is for informational purposes only and is subject to change without prior notice. Copperhead Armoury, along with its distributors and resellers, disclaims any responsibility or liability for errors or inaccuracies that may occur in this document.

While Copperhead Armoury safes are designed to provide a level of protection for your valuables, no safe is entirely impervious. Copperhead Armoury, its distributors, and resellers do not guarantee against loss, theft, damage, or claims arising from the use of their products.

Always secure the safe to the floor or support the door before opening, as the safe may tip over when the door is opened.

Always use appropriate lifting equipment and safe handling techniques when moving or carrying the safe.

Keep the safe locked at all times when not in use.

Avoid leaving keys or key codes in easily accessible or visible locations.

Do not disclose the code or location of keys to unauthorized individuals, especially in safes containing firearms.

Ensure the safe is securely bolted to the floor or wall.

Prior to storing firearms in the safe, verify compliance with legal requirements.

Do not store emergency backup keys inside the safe.

INSTALLATION GUIDELINES

Ensure you comply with local firearms storage regulations. Place and secure your safe according to these laws and ensure its construction meets the specific requirements for storing firearms.

LOCATION

Opt for a concealed location. Keeping your safe discreet enhances security by preventing others from knowing its existence or the presence of firearms in your home. Choose an accessible spot that is not easily visible to visitors, away from high-traffic areas and out of reach of children. Placing the safe in a corner with the door opening next to a wall significantly reduces the vulnerability to pry attacks.

INSTALLATION

Once you've selected the ideal location, lift the floor mats to expose the floor mounting holes.

1. Position the safe and mark the locations for the two (Floor) OR four (Wall) holes.
2. If installing on carpet, use lifting equipment to move the safe aside and carefully trim the carpet around the hole locations, leaving a 10mm margin.
3. Drill the holes using a 12mm-12.5mm masonry drill bit to a depth of approximately 110mm (verify slab thickness and local legal requirements).
4. Align the safe with the drilled holes, place washers over the holes inside the safe.
5. Insert masonry anchor bolts through the holes and washers, securing them tightly into the floor. Ensure the bolts are flush with the safe's floor and tighten using a spanner or socket wrench.
6. Replace the carpet over the safe's base once installation is complete.

Electronic Lock Instructions

1. Yellow LED is the input digital indicator, green LED is the door opening indicator, and red LED is the under-voltage indicator.
2. # is the confirmation key; * is the clear key.
3. Two sets of passwords: factory Original password is 159, the management code is blank and can be set.
4. Every time you press a key, the buzzer will beep once and the yellow LED will turn on, indicating that the key has been entered.

Note: When you power on, you will hear a beep.

2. Open the Door:

After entering the correct 3-8 digit (159 for first setup) password and pressing the # button to confirm, the buzzer will beep twice, and the yellow LED will flash twice for 1 second. The green LED will be on for 6 seconds. If you enter the wrong password, you can press the * key to clear all the passwords you have entered so far.

3. Set a Password:

1. When setting the user password, press the setting button once. The yellow LED will flash twice and will remain on after the buzzer beeps twice. Then enter the 3-8 digit password and press # to confirm. The yellow LED will flash twice and the buzzer will beep twice, indicating that the setting is successful.
2. When setting the master password, enter "00" and then press the setting button. The buzzer will beep three times, the yellow LED will flash three times, then enter the 3-8 digit password, and press # to confirm. The yellow LED will flash twice and the buzzer will beep twice, indicating that the setting is successful.

Note:

1. When pressing the setting button, if there is no action, the yellow LED will stay on for about 10 seconds and then enter the sleep state.
2. When the password is entered incorrectly, you can press the * key to clear all the passwords currently entered.

4. Self-Locking Function After Entering the Wrong Password:

1. After entering the wrong password and pressing # to confirm, the yellow LED will flash three times and the buzzer will beep three times for 1.5 seconds.

2. When the wrong password is entered three times in a row, the password lock will automatically lock for 20 seconds and the buzzer will alarm. After more than six consecutive code errors, the system locks for 5 minutes and the buzzer alarms. **Note:** During the self-locking process, any input key is non-responsive.

5. Silencing Function:

Press 00* to turn on the silence mode, and there will be no sound for any operation. Press 66* to turn off the silence mode and restore the normal sound. **Note:** The sound will automatically return to normal after a power failure.

6. Under-Voltage Function:

When the voltage is 4.5V (+/-0.2), the indicator LED turns red to remind the user that the battery is low and needs to be replaced to ensure normal unlocking.

7. Restore Factory Settings:

Press and hold the setting button for about 5 seconds until you hear a beep, and the factory settings will be restored.

WARRANTY INFORMATION:

Copperhead Armoury safes come with a 3-year structural warranty covering manufacturing defects and craftsmanship, along with a 12-month warranty on moving parts and electronics. This warranty excludes damage caused by abuse, misuse, improper installation or use, theft, loss of goods, corrosion, or normal wear and tear. All warranty claims require approval from Copperhead Armoury or their authorized distributors, assessed on a case-by-case basis and at their discretion. The Safe is rated for Fire Proofing for a limited amount of time during an intense fire event, however not all fires are the same and Copperhead Armoury cannot guarantee that a house fire will not cause failure of the safe. All efforts have been made to ensure the safe is Fireproof to correct standards.

REPLACEMENT KEYS:

Copperhead Armoury provides replacement keys for safes that are lost or stolen. To request a replacement key, please visit your local dealer in person and provide a copy of your safe receipt, a photo of the safe's barcode and serial number (located on the front of the safe), a copy of your firearms license, and a JP Certified Statutory Declaration confirming your ownership of the safe. Replacement keys may take between 4 to 12 weeks to be processed.

For any warranty claims or lost key requests, please contact the dealer from whom you purchased the safe.

